

Roofing (Stormwater) Plumbing RP 06 | Sizing a roof catchment drainage system

Audience

The audience/s for this Practice Note include/s:

- | | |
|--|--|
| <input checked="" type="checkbox"/> Architects/ Designers | <input checked="" type="checkbox"/> Owner Builders |
| <input checked="" type="checkbox"/> Builders | <input checked="" type="checkbox"/> Plumbers |
| <input checked="" type="checkbox"/> Building Surveyors/ Inspectors | <input type="checkbox"/> Real estate management agents |
| <input checked="" type="checkbox"/> Engineers | <input checked="" type="checkbox"/> Trades and Maintenance (inc. Electricians) |
| <input type="checkbox"/> Home Owners / Residential Tenants | |

Purpose

This Practice Note provides guidance on roof sizing and calculations for a complete roof drainage system.

The content below provides guidance on:

- The steps required when sizing a roof catchment drainage system
- Design example of a roof catchment drainage system
- Typical types of roof catchment installations
- How to calculate roof sizing



For guidance on regulatory frameworks, please refer to Plumbing Practice Note RF 01 | Regulatory Framework.

Abbreviations & Definitions

The abbreviations and definitions set out below are for guidance only. They are not intended to vary those set out in the Building Act 1993, the Plumbing Regulations 2018 or the National Construction Code.

- **Act** – Building Act 1993
- **NCC** – National Construction Code 2022
- **Regulations** – Plumbing Regulations 2018

Steps required when sizing a roof catchment drainage system

The following steps are applicable for domestic houses with eaves gutters:

- 1 Determine the Average Exceedance Probability (AEP) 5% formerly known as ARI 20 years
- 2 Calculate the total roof catchment area
- 3 Select the eaves gutter design and the slope
- 4 Determine the downpipe size
- 5 Determine the maximum catchment area per downpipe
- 6 Determine the minimum number of downpipes required
- 7 Determine the catchment area per downpipe
- 8 Determine the most advantageous downpipe positions
- 9 Select an overflow provision
- 10 Apply to the roof catchment drainage system to the building plan

Example design of a roof catchment drainage system

The following example is a typical single storey dwelling built in Melbourne CBD with a roof pitch of 23°.

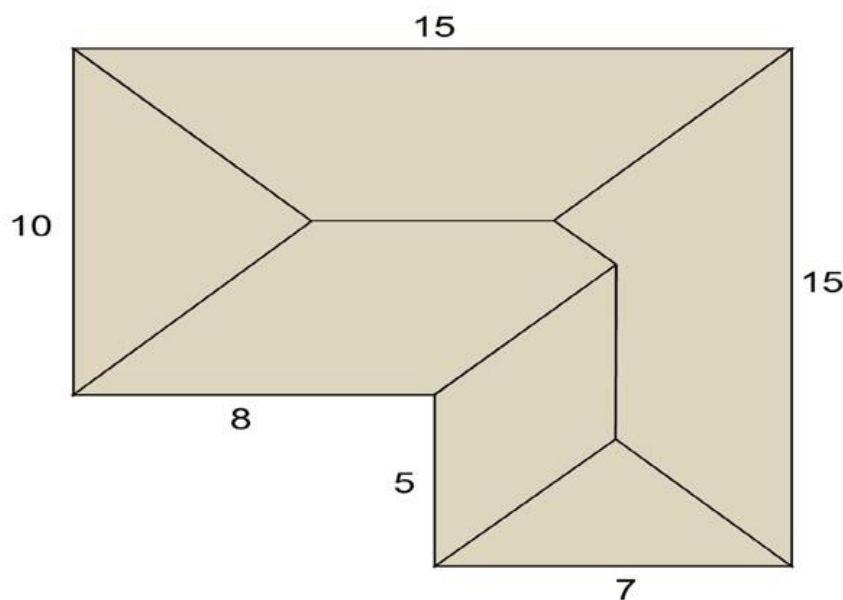


Figure 1

Reproduced with permission of Standards Australia Limited. Copyright in 3500.3 vests in Standards Australia Limited and Standards New Zealand

**Design example method for sizing a roof catchment (Eaves gutters)****STEP 1:**

Determine the Rainfall Intensity for the location and Average Recurrence Interval (ARI) [AEP 5%] for 20 years and a duration of 5 minutes

As per the requirements of AS/NZS 3500.3 Table D.1 the 5min/20-year ARI for Melbourne city is 132 mm/h.

STEP 2:

Calculate roof area from the plan. To calculate the total roof area, refer to AS/NZS 3500.3 Table 3.4.3.2: Catchment Slope Factor Area Multiplier.

Scenario: The roof dimensions are (15m x 10m) + (5m x 7m) 150m² + 35m² = 185m².

- The roof has a 23° pitch.
- The slope factor (F) = 1.21
- F x roof plan area = 1.21m² x 185m²
- The total roof catchment area= 223.85m²



TABLE 3.4.3.2
CATCHMENT AREA MULTIPLIER (*F*) FOR VARIOUS ROOF SLOPES
(FOR EAVES GUTTERS ONLY)

| Roof slope degrees | Multiplier (<i>F</i>) | Roof slope degrees | Multiplier (<i>F</i>) | Roof slope degrees | Multiplier (<i>F</i>) |
|-----------------------|-------------------------|-----------------------|-------------------------|-----------------------|-------------------------|
| 0 | 1.00 | 22 | 1.20 | 44 | 1.48 |
| 1 | 1.01 | 23 | 1.21 | 45 | 1.50 |
| 2 | 1.02 | 24 | 1.22 | 46 | 1.52 |
| 3 | 1.03 | 25 | 1.23 | 47 | 1.54 |
| 4 | 1.03 | 26 | 1.24 | 48 | 1.56 |
| 5 | 1.04 | 27 | 1.25 | 49 | 1.58 |
| 6 | 1.05 | 28 | 1.27 | 50 | 1.60 |
| 7 | 1.06 | 29 | 1.28 | 51 | 1.62 |
| 8 | 1.07 | 30 | 1.29 | 52 | 1.64 |
| 9 | 1.08 | 31 | 1.30 | 53 | 1.66 |
| 10 | 1.09 | 32 | 1.31 | 54 | 1.69 |
| 11 | 1.10 | 33 | 1.32 | 55 | 1.71 |
| 12 | 1.11 | 34 | 1.34 | 56 | 1.74 |
| 13 | 1.12 | 35 | 1.35 | 57 | 1.77 |
| 14 | 1.12 | 36 | 1.36 | 58 | 1.80 |
| 15 | 1.13 | 37 | 1.38 | 59 | 1.83 |
| 16 | 1.14 | 38 | 1.39 | 60 | 1.87 |
| 17 | 1.15 | 39 | 1.40 | 61 | 1.90 |
| 18 | 1.16 | 40 | 1.42 | 62 | 1.94 |
| 19 | 1.17 | 41 | 1.43 | 63 | 1.98 |
| 20 | 1.18 | 42 | 1.45 | 64 | 2.03 |
| 21 | 1.19 | 43 | 1.47 | 65 | 2.07 |

Table 1: Catchment area multiplier (*F*) for various roof slopes, referenced from 3500.3 Table 3.4.3.2

Reproduced with permission of Standards Australia Limited. Copyright in 3500.3 vests in Standards Australia Limited and Standards New Zealand.

STEP 3:

Select eaves gutters and slope. Refer to the manufacturer's guidelines for the effective cross-sectional area of the eaves gutter.

Scenario: The gutter selected has a cross-sectional area of 6125 mm² and will be installed with a slope of 1 in 500

STEP 4:

Determine downpipe size. To determine the downpipe size, refer to AS/NZS 3500.3 Table 3.5.2.

- Round up the cross-sectional area to 6400mm², as per Table 3.5.2.
- The minimum size of the downpipes is 100mm x 50mm or 90mm round

STEP 5:

Determine the maximum roof catchment area per downpipe

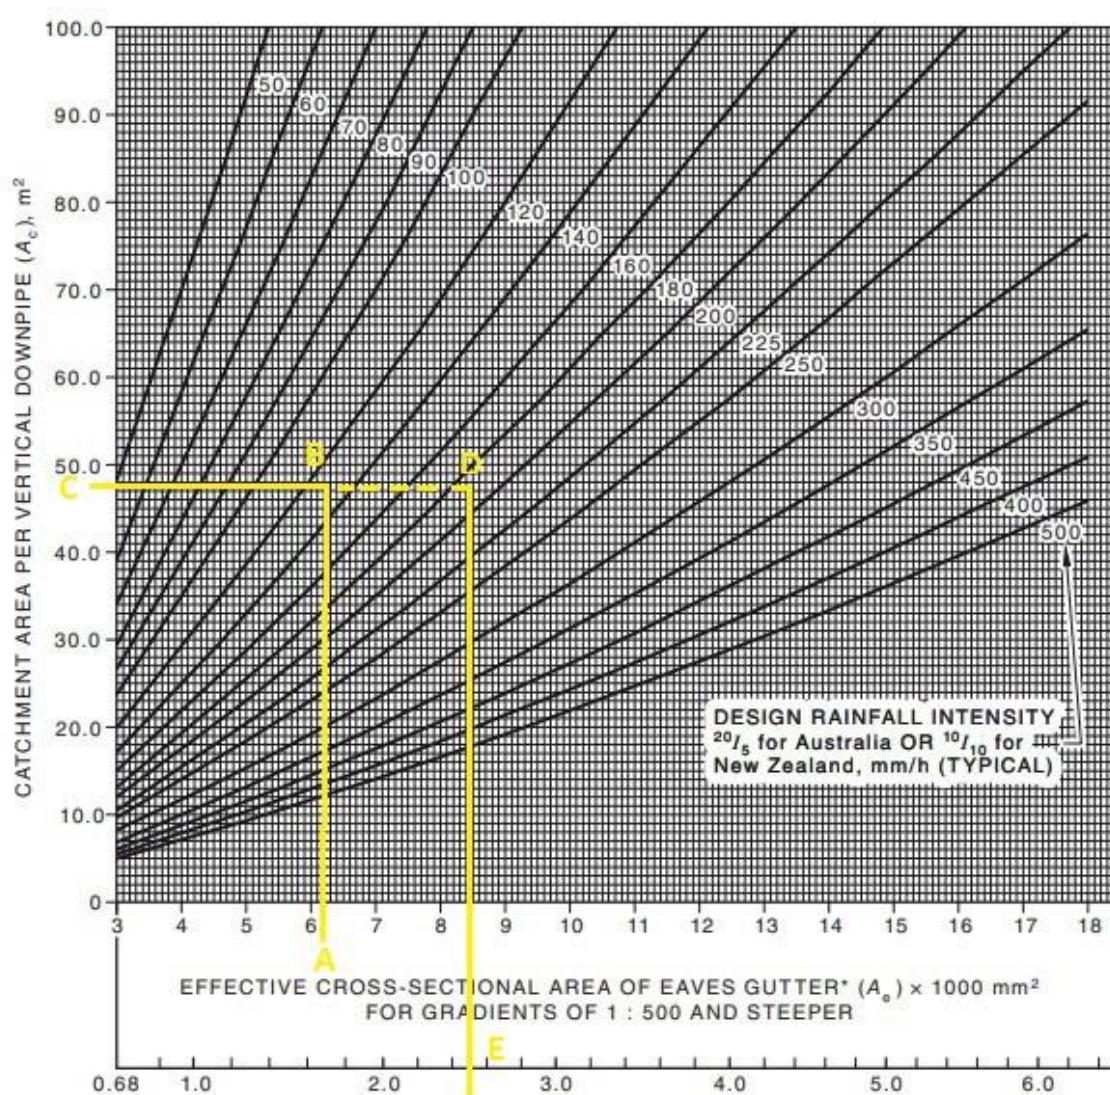


Figure 2 G.2 – Application for Figure 3.5.4 (A) Effective Cross-sectional of Eaves Gutters

Reproduced with permission of Standards Australia Limited. Copyright in 3500.3 vests in Standards Australia Limited and Standards New Zealand.

**Graph Interpretation:**

- A. A cross-section of gutter = 6125mm²
 - B. Average Rainfall Intensity (ARI) = 132 mm/h (20 year/5 mins)
 - C. Catchment area per downpipe = 47m²
 - D. Eaves overflow Average Rainfall Intensity (ARI) = 187mm/h (100 year/5mins)
 - E. Litres per second per metre = 2.5 L/s
- = Maximum roof area per downpipe is 47m²

STEP 6:**Determine the minimum number of downpipes**

To determine the minimum number of downpipes required, refer to AS/NZS 3500.3 Figure 3.5.4(a)

The minimum number of downpipes is equal to the roof catchment area divided by allowable maximum catchment per downpipe=

Calculation = $224 \div 47 = 4.75$

Round up to 5 downpipes

STEP 7:**Determine the average catchment per downpipe**

Calculation: $224 \div 5 = 44\text{m}^2$

STEP 8:**Divide the roof up evenly to locate downpipe positions**

Note: all catchment areas are less than the maximum area per downpipe of 47m².

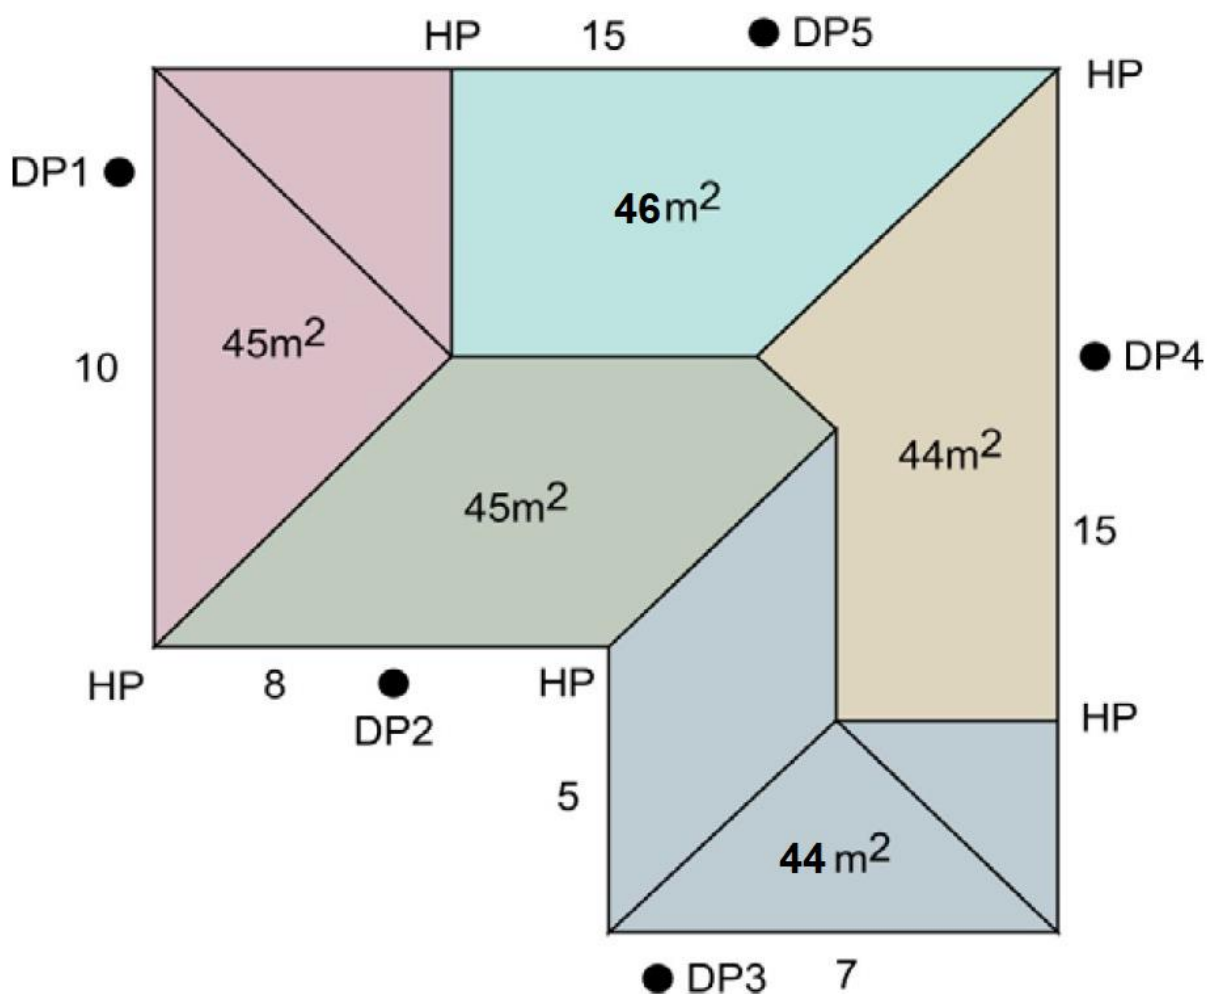


Figure 2

Reproduced with permission of Standards Australia Limited. Copyright in 3500.3 vests in Standards Australia Limited and Standards New Zealand

Legend

HP = High Point

DP = Downpipe

There are many possibilities for downpipe positions. In some cases, depending on roof shape or building layout extra downpipes may be needed as it is not always possible to achieve approximately equal catchment areas.

- Valley gutters may be at high points to allow drainage away from internal angles.
- The sub catchment areas may not add up exactly due to rounding off during calculations.
- In this example, as per Step 5, no catchment area should exceed the allowable 47m².

STEP 9:**Provide an overflow.**

Note* If a gutter can overflow into the building, an overflow provision must be installed. There are different methods that can be used to provide overflow provision.

Overflow measures for eaves need to be sized to allow for a rainfall intensity for an ARI of 100 years for a 5-minute duration

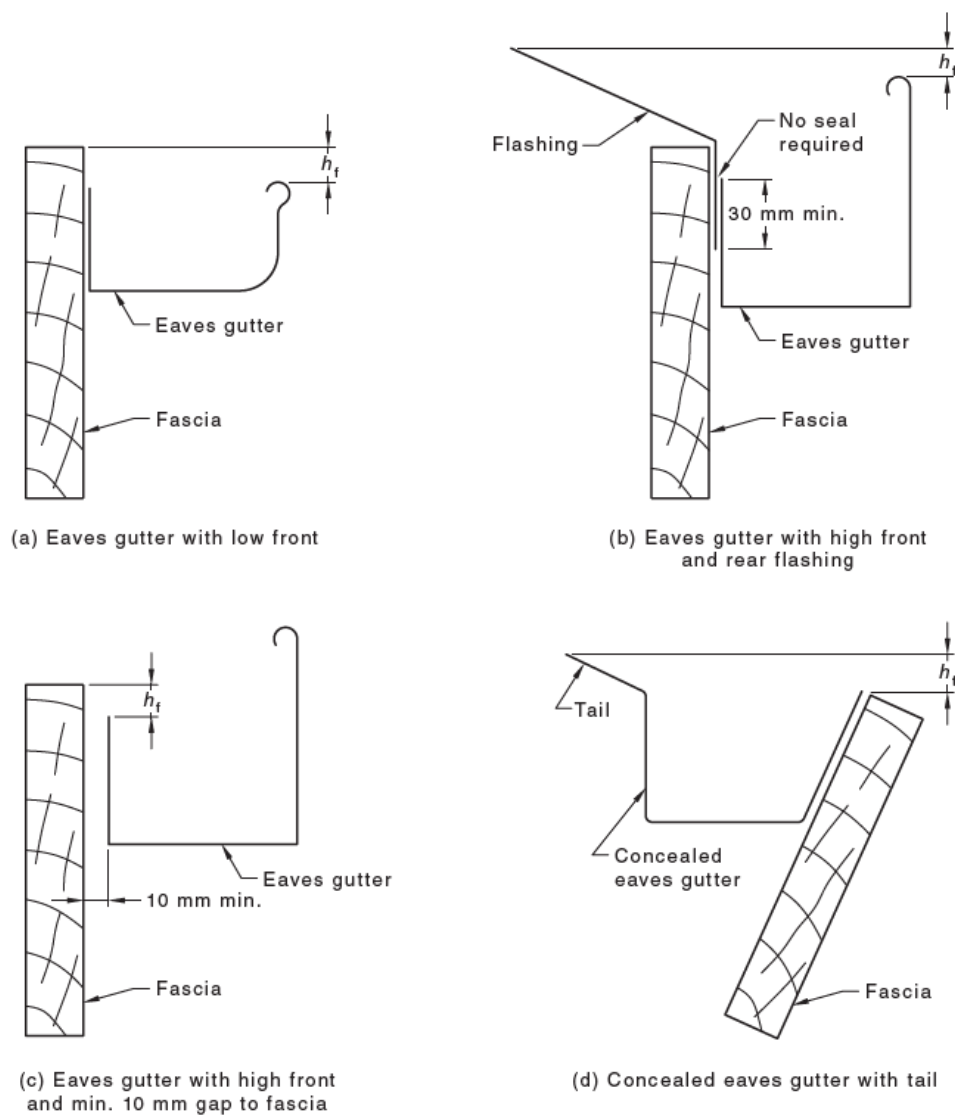


Figure 4: Overflow measures, referenced from AS/NZS 3500 Part 3

Reproduced with permission of Standards Australia Limited. Copyright in AS/NZS 3500.3 vests in Standards Australia Limited and Standards New Zealand.



To calculate H_f , please refer to AS/NZS 3500.3 Figure 3.5.4(a) Point E

- Point E provides a L/s for the eaves gutter

Scenario: the eaves gutter has a cross sectional area of 6125mm² (approximately 2.5 L/s)

Calculation: Divide 2.5 by the length of the gutter. A 10m length of 2.5 divided by 10m = 0.25 L/s per metre of gutter. Refer to Table F1 for a sloping gutter with 0.25 L/s/m the H_f is 14mm

| Gutter slope | Average inflow per metre of gutter L/s/m | | | | |
|------------------|--|-----|-----|-----|-----|
| | 0.2 | 0.4 | 0.6 | 0.8 | 1.0 |
| Level gutter | 18 | 20 | 22 | 23 | 25 |
| Sloping gutter | 12 | 14 | 16 | 17 | 19 |
| Minimum h_f mm | | | | | |

Table 1 above : Average inflow per metre of gutter, referenced from AS/NZS 3500: Part 3: Minimum h_f Values
 Reproduced with permission of Standards Australia Limited. Copyright in AS/NZS 3500.3 vests in Standards Australia Limited and Standards New Zealand.



The performance requirements of the NCC can also be met by a performance solution. Refer to these requirements to develop a performance solution.

Related Documentation

- Plumbing Regulations 2018
- National Construction Code, Volume 3, Plumbing Code of Australia (PCA) 2022: VIC Part E3
- AS/NZS 3500.3:2021 Part 3: Stormwater Drainage
- Practice Note RP-01: Regulatory Framework for Roof Plumbing
- Practice Note RP-02: Box Gutters
- Practice Note RP-03: Eaves Gutters
- Practice Note RP-04: Downpipes
- Practice Note RP-05: Flashings

List of Amendments

- Updated format and content review
- Minor amendments to improve readability



Document history

| | |
|------------------------|---|
| Sector | Plumbing |
| Category | Roof Plumbing |
| Topic | Sizing a roof catchment drainage system |
| Document number | 06 |
| Version | 2.0 |
| Superseded | <ul style="list-style-type: none">Version 1, published 28 June 2021 |
| Published | 4 May 2023 |

Contact Us

If you have a technical enquiry, please email plumbingtechnicaladvice@vba.vic.gov.au or call 1300 815 127.

Victorian Building Authority

Goods Shed North
733 Bourke Street
Docklands VIC 3008

www.vba.vic.gov.au

Copyright

© May 2023 Victorian Building Authority (VBA).

This Practice Note has been prepared and published by the VBA for general educational and information purposes only. This publication must not be copied, reproduced, published, adapted, or communicated by any person without the VBA's prior written consent or as permitted by the Copyright Act 1968 (Cth). The VBA makes no warranties or representations whatsoever about the accuracy, reliability, suitability, completeness or authenticity of any information or material contained in this resource. Any use or reliance on such information is at a person's own risk. The VBA accepts no liability whatsoever for any direct, indirect, or consequential loss or damage any person may suffer arising out of or in connection with the access or use of this resource (including any third-party material included in this resource).